



# MSTronic Co.,Ltd.

2F, 12, Gongshang Rd., Wugu Dist., New Taipei City, 248, Taiwan

TEL:886-2-2293-0159 FAX:886-2-2292-8851

E.MAIL: mse@mse.com.tw

WEB: <http://www.mse.com.tw>

## **MIT-07G-24BNNN**

### **PoE Injector AC/DC, 5G, Passive**

#### **1. INPUT :**

- 1.1 Input Voltage: 100Vac to 240Vac
- 1.2 Input Frequency: 50/60 hz
- 1.3 Input Current: 0.49A at 100Vac  
0.27A at 240Vac

#### **2. OUTPUT :**

##### **2.1 Output Voltage & Current:**

OUTPUT	24V
Max. load	1A
Power	24W
Min. Load	0.1A
Load reg. %	5%
Line reg. %	1%
Ripple %	1%
Noise %	1%

TOTAL POWER : 24W

Note 1: Noise bandwidth is from DC to 20Mhz. Ripple & Noise is measured by  
Paralleling a 0.1Uf metalized capacitor on the test point.

#### **3. EFFICIENCY : 87% min at Full Load , 100Vac & 240Vac Input Voltage**

#### **4. PROTECTION**

##### **4.1 Short Circuit Protection**

Output Short GND Terminal will not damage the Power Supply and will Auto-Reset.

##### **4.2 Input with Fuse Protection.**

##### **4.3 High Pot: 4242Vdc, 60Sec, Input Terminal to output Terminal.**

##### **4.4 Meet DOE Level 6 (USA-VI )**

#### **5. GENERAL DESCRIPTION**

##### **5.1 Operation Temperature: -40 - +40 Degree**

##### **5.2 Storage Temperature: -40 - +85 Degree**



# MSTronic Co.,Ltd.


2F, 12, Gongshang Rd., Wugu Dist., New Taipei City, 248, Taiwan

TEL:886-2-2293-0159 FAX:886-2-2292-8851

E.MAIL: mse@mse.com.tw

WEB: <http://www.mse.com.tw>

- 5.3 Operation Humidity: 5% - 90%
- 5.4 Cooling: Free air cooling
- 5.5 SIZE : 86\*78\*36 (L)\*(W)\*(H) unit: m/m
- 5.6 DIN rail mountable by clip kit (option)

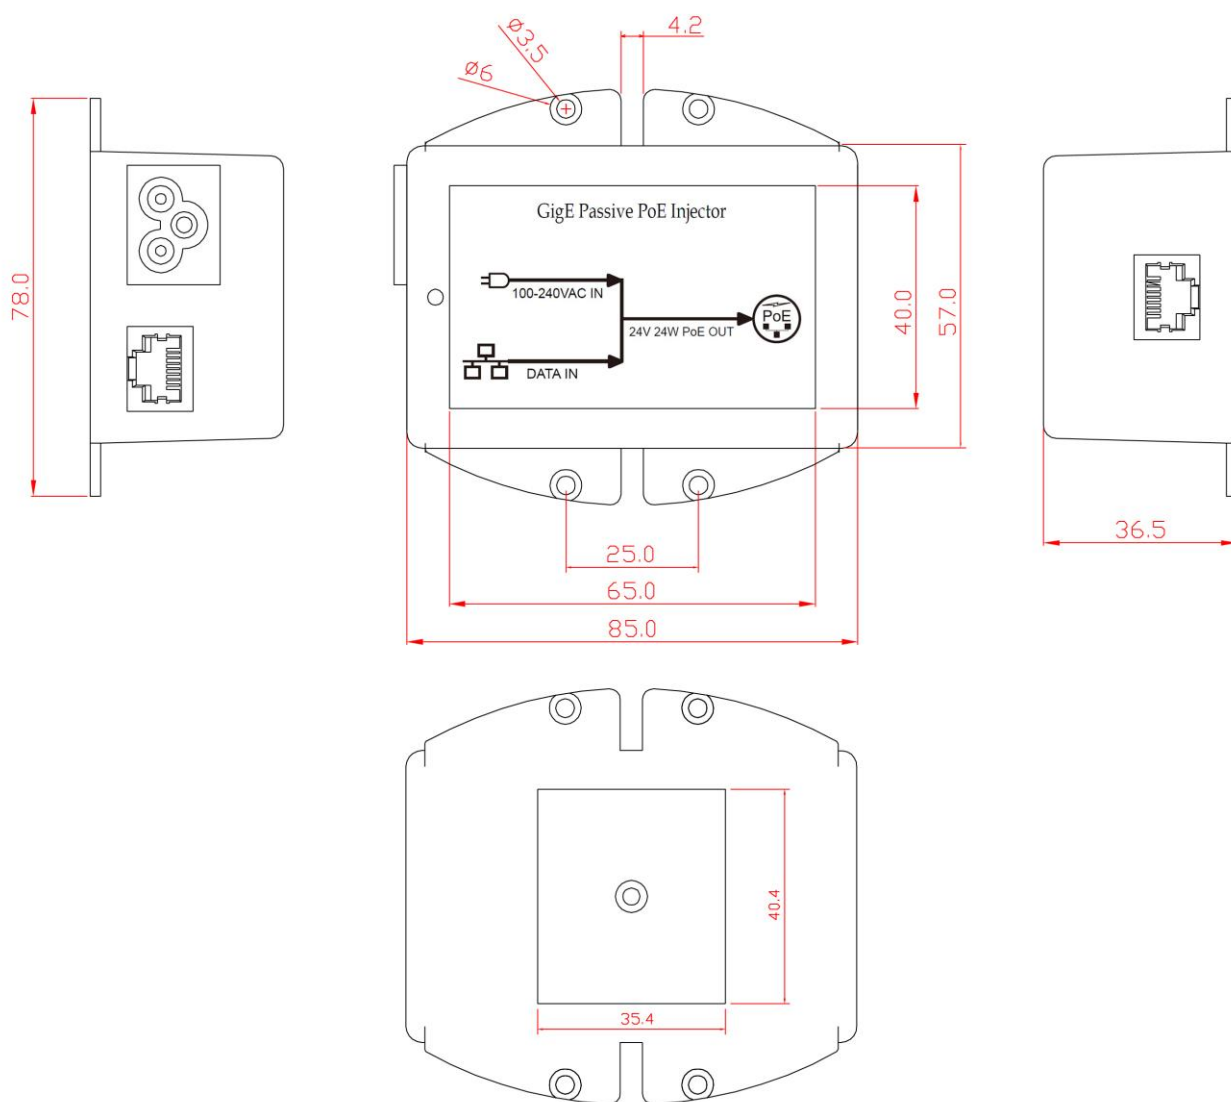

## 6. Indicator :

- 6.1 LED (GREEN) indicates PWR – OK



# MSTronic Co.,Ltd.

2F, 12, Gongshang Rd., Wugu Dist., New Taipei City, 248, Taiwan

TEL:886-2-2293-0159 FAX:886-2-2292-8851

E.MAIL: mse@mse.com.tw

WEB: <http://www.mse.com.tw>

## 7. CONNECTION :

RJ-45 Input (Data Only)			RJ-45 Output (Data & Power)	
Pin	Symbol	Description	Symbol	Description
1	BI_DA+	Data Pair A+	BI_DA+	Data Pair A+
2	BI_DA-	Data Pair A-	BI_DA-	Data Pair A-
3	BI_DB+	Data Pair B+	BI_DB+	Data Pair B+
4	BI_DC+	Data Pair C+	+Vdc + BI_DC+	power(+)+Data Pair C+
5	BI_DC-	Data Pair C-	+Vdc + BI_DC-	power(+)+Data Pair C-
6	BI_DB-	Data Pair B-	BI_DB-	Data Pair B-
7	BI_DD+	Data Pair D+	-Vdc + BI_DD+	power(-)+Data Pair D+
8	BI_DD-	Data Pair D-	-Vdc + BI_DD-	power(-)+Data Pair D-

## Installation

### 8. Installation

To install the Gigabit PoE Injector, please follow the steps below.

8.1 Connect the DATA IN port on the Gigabit PoE Injector to a switch or HUB with an RJ-45 cable.

8.2 Using an RJ-45 cable, connect the DATA OUT port on the Gigabit PoE Injector to a PoE splitter, PoE device (such as a router, access Point, etc.) or a PoE Hub.

8.3 Plug in the power connector of the Injector to a connect dc power outlet.

8.4 The product fixed installation, please refer to the figure 1.

8.5 Before starting, ensure all connections are correct.

- The Gigabit PoE Injector connects to the Splitter, PoE Hub or POE device through the DATA OUT port.
- The Gigabit PoE Injector connects to the switch through the DATA IN port.
- The POWER IN port is receiving power from the dc power outlet.

Start connecting the operating voltage solely if all the above requirements are fulfilled.



# MSTronic Co.,Ltd.

2F, 12, Gongshang Rd., Wugu Dist., New Taipei City, 248, Taiwan

TEL:886-2-2293-0159 FAX:886-2-2292-8851

E.MAIL: mse@mse.com.tw

WEB: <http://www.mse.com.tw>

## 9. Safety Instructions

- 9.1 This product is for build-in use only
- 9.2 This product is only used by instructed person
- 9.3 The application equipment should provide basic safeguard
- 9.4 Do not place the device on any unstable surface
- 9.5 Do not use the device near water
- 9.6 Do not place the device near, or over, radiators or heat registers
- 9.7 Do not place the device on any locations where children

Figure 1.

